


Module Front

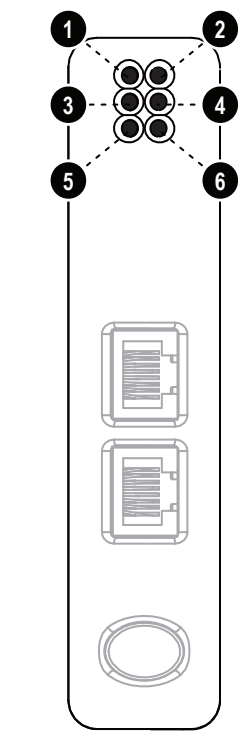

LED Indicators

LED	Indication	Description
Communication Status (1)	Off Green Green, flashing (1Hz) Red, flashing (1Hz) Red, flashing (2Hz) Red, flashing (4Hz)	Not initialized (or no power). Initialized, normal operation. IP address not set by on-board switches. Internal error; please contact supplier. Failed to load network configuration (ethcfg.cfg). Internal error; please contact your supplier.
MB TCP Conn. (2)	-	Indicates the number of Modbus/TCP connections (each connection represented as a single green flash)
Link (3)	Off Green	No link. Connect to Ethernet network detected.
Activity (4)	Flashing green	Receiving/transmitting Ethernet packet.
Subnet Status (5)	Off Green Green, flashing Red	(no power) Running Not running Stopped
Device Status (6)	Off Green Green, flashing Alternating red/green	(no power) Initialising Configuration OK Missing or invalid configuration

Accessories Checklist

The following items are required for installation:

- Anybus Communicator Resource CD (Includes configuration software, manuals and application notes)
- RS232 configuration cable
- Subnetwork connector
- Ethernet cable and connector (not included)

Installation and Startup Summary

- Mount the Communicator on the DIN-rail.
- Connect the Communicator to the Modbus/TCP network.
- Connect the Communicator to the subnetwork.
- Connect the configuration cable between the Communicator and the PC containing the Anybus Configuration Manager software (ACM).
- Power on the Communicator (+24 V DC).
- Configure the Communicator using ACM.
- Configure and start up the Modbus/TCP network.


Bottom View

PC Connector:

- 1. GND
- 2. GND
- 3. RS232 Rx
- 4. RS232 Tx

Power:


- 1. +24 V DC
- 2. GND

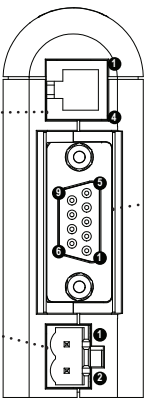

Subnetwork Connector

Pin no.	Description
1	+5V OUT
2	RS232 Rx
3	RS232 Tx
4	NC
5	Signal GND
6	RS422 Rx+
7	RS422 Rx-
8	RS485+ / RS422 Tx+
9	RS485- / RS422 Tx-

Ethernet/IP Connectors

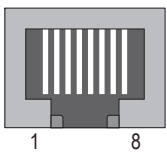

Pin no	Description
1	TD+
2	TD-
3	RD+
4	Termination
5	Termination
6	RD-
7	Termination
8	Termination

Further information and documents about this product can be found at the product pages on www.anybus.com.

UL Certification



IND: CONT. EQ.
FOR HAZ LOC.
CL I, DIV 2
GP A,B,C,D
TEMP
CODE
E203225

Warnings!

- **WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.**
- **WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES.**
- **WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.**

Attention!

- **ATTENTION – RISQUE D'EXPLOSION – LE REMPLACEMENT DE TOUT COMPOSANTS INVALIDE LA CERTIFICATION CLASS I, DIVISION 2.**
- **ATTENTION – RISQUE D'EXPLOSION – EN ZONE EXPLOSIVE, VEUILLEZ COUPER L'ALIMENTATION ÉLECTRIQUE AVANT LE REMPLACEMENT OU LE RACCORDEMENT DES MODULES.**
- **ATTENTION – RISQUE D'EXPLOSION – NE PAS DÉCONNECTER L'ÉQUIPEMENT TANT QUE L'ALIMENTATION EST TOUJOURS PRÉSENTE OU QUE LE PRODUIT EST TOUJOURS EN ZONE EXPLOSIVE ACTIVE.**

Additional installation and operating instructions

- Max Ambient Temperature: 55°C (for Hazloc environments)
- Field wiring terminal markings (wire type (Cu only, 14-30 AWG)).
- Use 60/75 or 75°C copper (Cu) wire only.
- Terminal tightening torque must be 5-7 lb-in (0.5 - 0.8 Nm).
- Use in overvoltage category 1 pollution degree 2 environment.
- Installed in an enclosure considered representative of the intended use.
- Secondary circuit intended to be supplied from an isolating source and protected by overcurrent protective devices installed in the field sized per the following:

Control Circuit Wire Size		Maximum Protective Device Rating
AWG	(mm ²)	Amperes
22	(0.32)	3
20	(0.52)	5
18	(0.82)	7
16	(1.3)	10
14	(2.1)	20
12	(3.3)	25

EMC Compliance (CE)



This product is in accordance with the EMC directive 89/336/EEC, with amendments 92/31/EEC and 93/68/EEC through conformance with the following standards:

- **EN 50082-2 (1993)**
EN 55011 (1990) Class A
- **EN 61000-6-2 (1999)**
EN 61000-4-3 (1996) 10 V/m
EN 61000-4-6 (1996) 10 V/m (all ports)
EN 61000-4-2 (1995) ±8 kV Air Discharge
±4 kV Contact discharge
EN 61000-4-4 (1995) ±2 kV Power port
±1 kV Other ports
EN 61000-4-5 (1995) ±0.5 kV Power ports (DM/CM)
±1 kV Signal ports

Further information and documents about this product can be found at the product pages on www.anybus.com.