 


Configuration Switches


The configuration switches determines the basic communication settings for the Modbus interface. Normally, these switches are covered by a plastic hatch. When removing the hatch, avoid touching the circuit boards and components. If tools are used to open the hatch, be cautious.

Note that these settings cannot be changed during runtime, i.e. the gateway must be restarted in order for any changes to have effect.




Node Address

Node Address	Sw. 1	Sw. 2	Sw. 3	Sw. 4	Sw. 5	Sw. 6	Sw. 7
(reserved)	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	OFF	OFF	OFF	ON
2	OFF	OFF	OFF	OFF	OFF	ON	OF
...	...	...	...	...	...	...	...
126	ON	ON	ON	ON	ON	ON	OFF
127	ON	ON	ON	ON	ON	ON	ON

 

Baudrate Configuration

Baudrate	Sw. 8	Sw. 1	Sw. 2
(reserved)	OFF	OFF	OFF
1200 bps	OFF	OFF	ON
2400 bps	OFF	ON	OFF
4800 bps	OFF	ON	ON
9600 bps	ON	OFF	OFF
19200 bps (standard)	ON	OFF	ON
38400 bps	ON	ON	OFF
57600 bps	ON	ON	ON

 

Parity & Stop Bits

Parity	Sw. 3	Sw. 4
(reserved)	OFF	OFF
No parity, 2 stop bits	OFF	ON
Even parity, 1 stop bit	ON	OFF
Odd parity, 1 stop bit	ON	ON



Physical Interface

Interface Type	Sw. 5
RS-485	OFF
RS-232	ON

