

### 1. SETTING in INCA:

SETTINGS → COMMUNICATION → DATA OUTPUT → „H-Bus (9600)“ → [Enter]

### 2. Upload config and check

Download correct Configuration to ABC if you do not get the below view after uploading config from ABC

### 3. Check data in ABC:



